





User Guide

EVC355

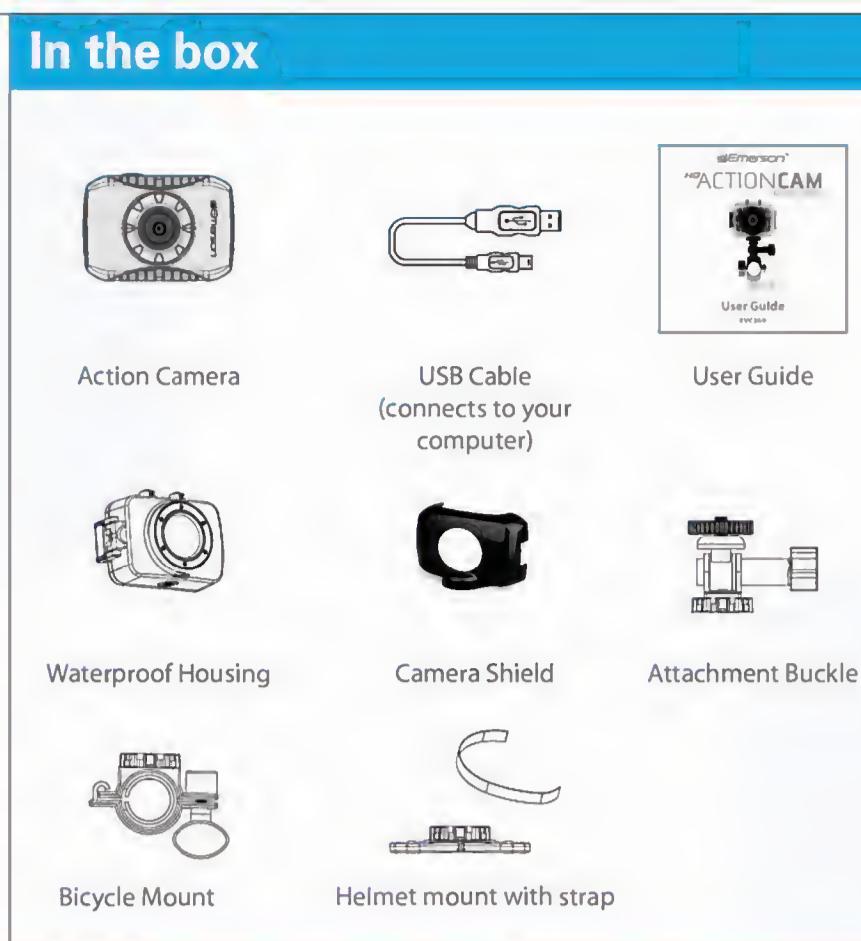

Setting up your camera

Charging the battery

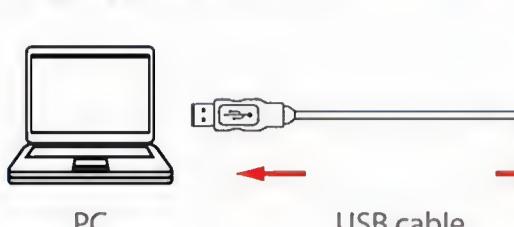


1. Connect the camera to your computer using the included USB cable.
2. The Charging indicator light will illuminate red.
3. The battery indicator is located on the lower left corner of the camera's LCD screen.

i A card can only be inserted one way; do not use force when inserting the card. Inserting or removing a card while the camera is on may damage the card, files stored on the card.

SD card installation

This camera has no internal memory and requires a Micro SD card (not included) to take and save pictures or record videos. The camera can support Micro SD cards up to 32GB. To install the Micro SD card into the camera, follow the steps below:

1. Turn off the camera.
2. Insert the Micro SD card into the card slot (as shown below) until it clicks and locks into place.
3. To remove the card, gently push it in until it pops out.

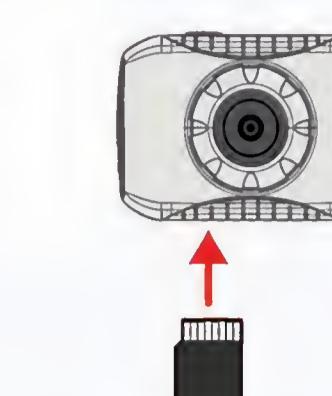

Location of controls




Using your camera

Turning the camera on/off

1. To turn the camera on, press and HOLD the [POWER] button until the display turns on.
2. To turn the camera off, press and HOLD the [POWER] button until the display turns off.

[POWER] button

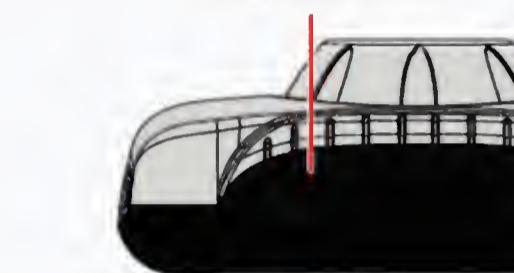

Using the Camera Mode Selector Switch

Camera Mode Selector

This camera has three different modes depending on what you are doing with the camera. For example:

- A) To take pictures switch the [Camera Mode Selector] all the way up to the picture mode position.
- B) To take videos switch the [Camera Mode Selector] to the middle, video mode position.
- C) To playback pictures/videos switch the [Camera Mode Selector] to the bottom position, playback mode.

1. Use the [Camera Mode Selector] switch to activate any of the camera modes.

2. Slide the selector up and down to choose one of three desired modes.



Picture Mode

1. Make sure that a Micro SD card is inserted into the camera.
2. Turn on the camera, and switch the [Camera Mode Selector] to picture mode.
3. Press the [SHUTTER / BACK] button to take a picture.



Self timer and continuous shooting
1. While in Picture mode, press the [MENU / SELECT] button, then press the [DOWN / ZOOM -] button till you see the [Driver Mode], press the [MENU / SELECT] button to select it.

2. Use the arrows to select from 2 second self-timer, 10 second self-timer or Burst.

3. When you select 2 or 10 seconds self-timer, the timer starts counting down from 2 or 10 seconds, and the camera takes a picture; when you select burst, the camera takes 3 pictures continuously.

4. Press the [SHUTTER / BACK] button to start self timer or burst snapshot.

5. To turn off the self timer or burst feature repeat step 1 then select "Off".

Zooming in & Out-In picture of video mode press the up and down arrow keys to zoom in or out

System Settings

To make changes to the camera's settings, follow the instructions below:

1. Press the [MENU / SELECT] Button.
2. Quickpress the [POWER] Button.
3. Use the [▲] or [▼] Buttons to scroll through the settings.
4. Press the [MENU / SELECT] button to select the desired setting.

System Settings Screen



Picture Mode Settings

To make changes to the picture mode settings, follow the instructions below:

1. Press the [Camera Mode Selector] to picture mode.
2. Press the [MENU / SELECT] Button.
3. Use the [▲] or [▼] Buttons to scroll through the settings.
4. Press the [MENU / SELECT] button to select the desired setting.

Picture Mode Settings Screen



Video Mode Settings

To make changes to the video mode settings, follow the instructions below:

1. Switch the [Camera Mode Selector] to video mode.
2. Press the [MENU / SELECT] Button.
3. Use the [▲] or [▼] Buttons to scroll through the settings.
4. Press the [MENU / SELECT] button to select the desired setting.

Video Mode Settings Screen



Playback Mode Settings

To make changes to the playback mode settings, follow the instructions below:

1. Switch the [Camera Mode Selector] to playback mode.
2. Press the [MENU / SELECT] Button.
3. Use the [▲] or [▼] Buttons to scroll through the settings.
4. Press the [MENU / SELECT] button to select the desired setting.

Playback Mode Settings Screen



System Settings Options

AUTO REVIEW	Set time of review after picture is taken (off, 1 sec, 3 sec).
POWER FREQUENCY	50Hz / 60Hz (The Camera's default setting is 60Hz for the USA and North America)
POWER SAVE	Setting off 1, 3, or 5 minutes. To conserve battery power, the camera will shut off if no buttons are pressed within the selected time.
DATE & TIME	Set the camera's date and time.
LANGUAGE	Set the camera's language.
FORMAT	Erase all data on the SD card
RESET ALL	Reset the camera's settings to factory default

Picture Mode Settings Options

1M (1280x960) / 3M (2048x1536) / 5M (2592x1944) (Higher picture resolution takes up more space on the SD card).
Super Fine / Fine / Normal
METERING Center / Multi / Spot
WHITE BALANCE Auto / Daylight / Cloudy / Fluorescent / Tungsten
EXPOSURE Adjust the exposure
DRIVER MODE "Off" (disables the self timer), "2" or "10" second options (self timer). "Burst" (3 frame shot)
EFFECT Normal / B&W / Sepia / Negative / Red / Green / Blue
DATE STAMP OFF / DATE / DATE & TIME


Video Mode Settings Options

HD 1280x720 / 3M (2048x1536) / 5M (2592x1944)
Select 1, 3, or 5 minutes.
Center / Multi / Spot
Auto / Daylight / Cloudy / Fluorescent / Tungsten
Adjust the exposure
"Off" (disables the self timer), "2" or "10" second options (self timer). "Burst" (3 frame shot)
NOR / B&W / SEPIA / NEGATIVE / RED / GREEN / BLUE
OFF / DATE / DATE & TIME

Playback Mode Settings Options

Look one or all of your picture and video files. When locked the files will not be deleted.
"One" (Delete the currently displayed video or picture) or "All"
Start a slide show, and adjust the slide show settings.
OFF / DATE / DATE & TIME


Mount Kit Assembly

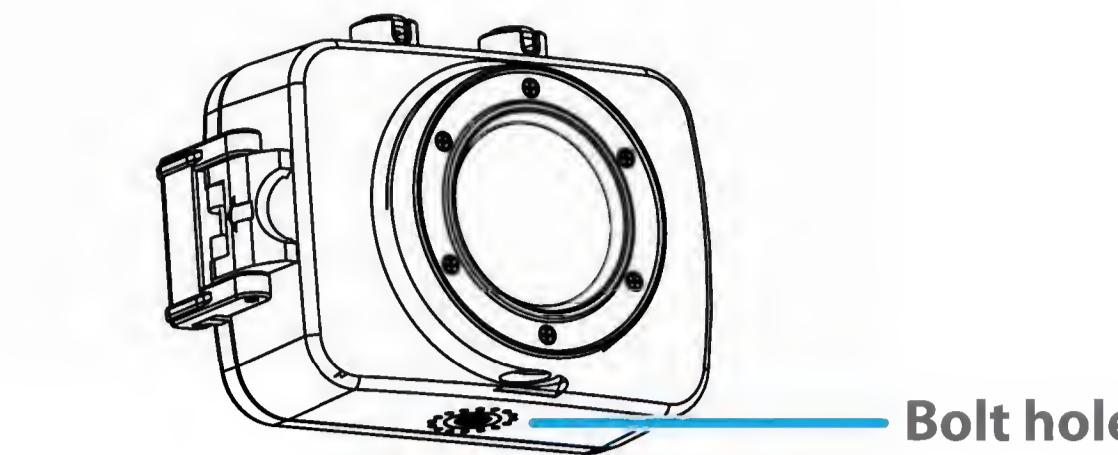


Attachment Buckle



Helmet Mount

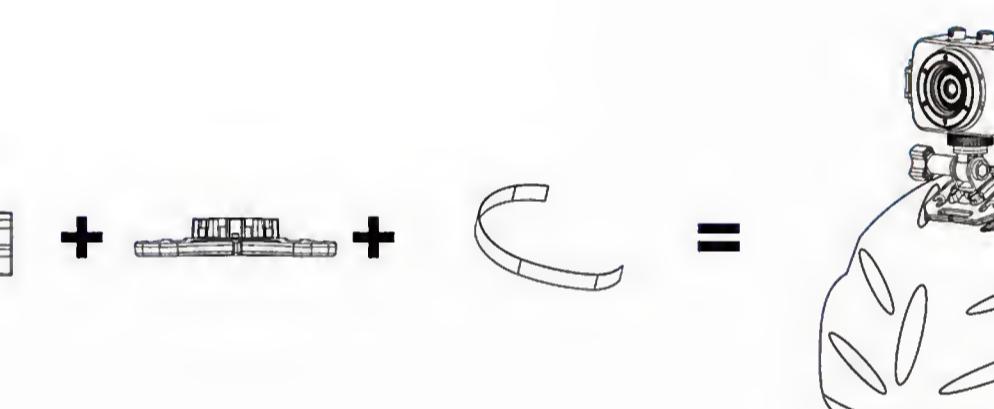

Bike Mount

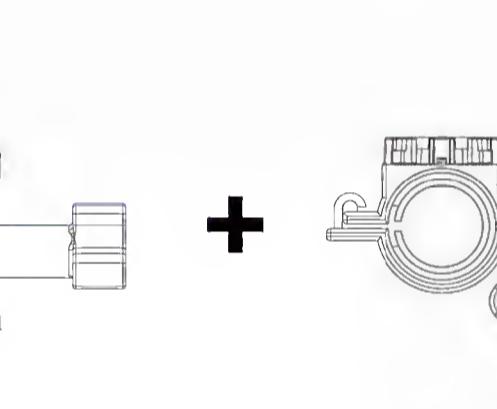

Waterproof case

Bike Mount Assembly

Helmet assembly

Assembling camera to bike mount

Your action cam comes with a water proof case for underwater action and added protection. To assemble your camera to the case, follow the instructions below:

1. Open the latch on the water proof case.
2. Insert the camera lens forward into the case.
3. Close the door and secure the latch.

NOTE: Please make sure latch is secure and that all seals are in place to ensure no water can seep in.

2. Use the included screw to secure the bike mount, tighten till the bike mount is secure.

3. With the camera assembled to the water proof case or included shield align the bolt on the attachment buckle to the hole on your waterproof case or shield and turn. When the desired position is reached, you can use the wheel on the bottom end of the bolt to tighten.

4. Connect the attachment buckle to the bike mount by pinching both sides on the attachment buckle and sliding it on to the mount.

NOTE: You must either use the waterproof case or shield to assemble the camera to the attachment buckle.

3. Insert the helmet strap through the slots on the side of the helmet mount and velcro the mount through the holes on your helmet.

NOTE: You must either use the waterproof case or shield to assemble the camera to the attachment buckle.

FCC information

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.
- Reprint or restate the receiving address.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Limitation of Warranty:

THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT; ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION PROVIDED BY THE SELLER OR ITS AGENTS OR EMPLOYEES WILL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AT&T, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

RISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, OR FROM ANY OTHER CAUSE, WHETHER IN CONTRACT, IN NEGLIGENCE, OR OTHERWISE. AT&T, INC. IS NOT RESPONSIBLE FOR THE PRODUCT IF THE PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)
www.southerntelecom.com